


Engine Troubleshooting Guide

USE THIS GUIDE TO GET YOUR ENGINE FIRING PROPERLY

The engine does not start

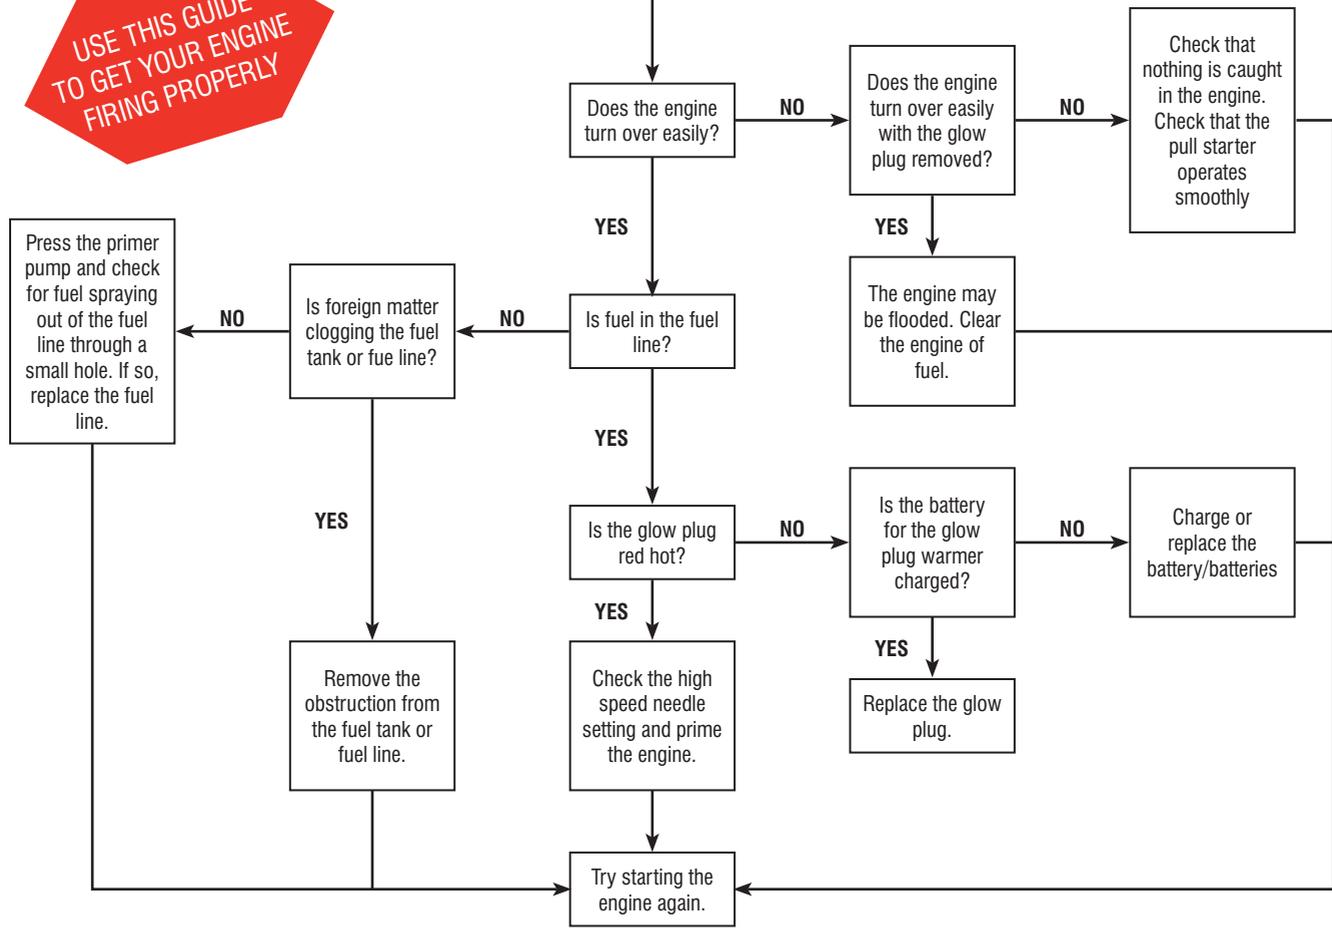

The engine starts

